



**2.00" Wide x 2.00" High (+/-) Ridgid Threshold Profile**

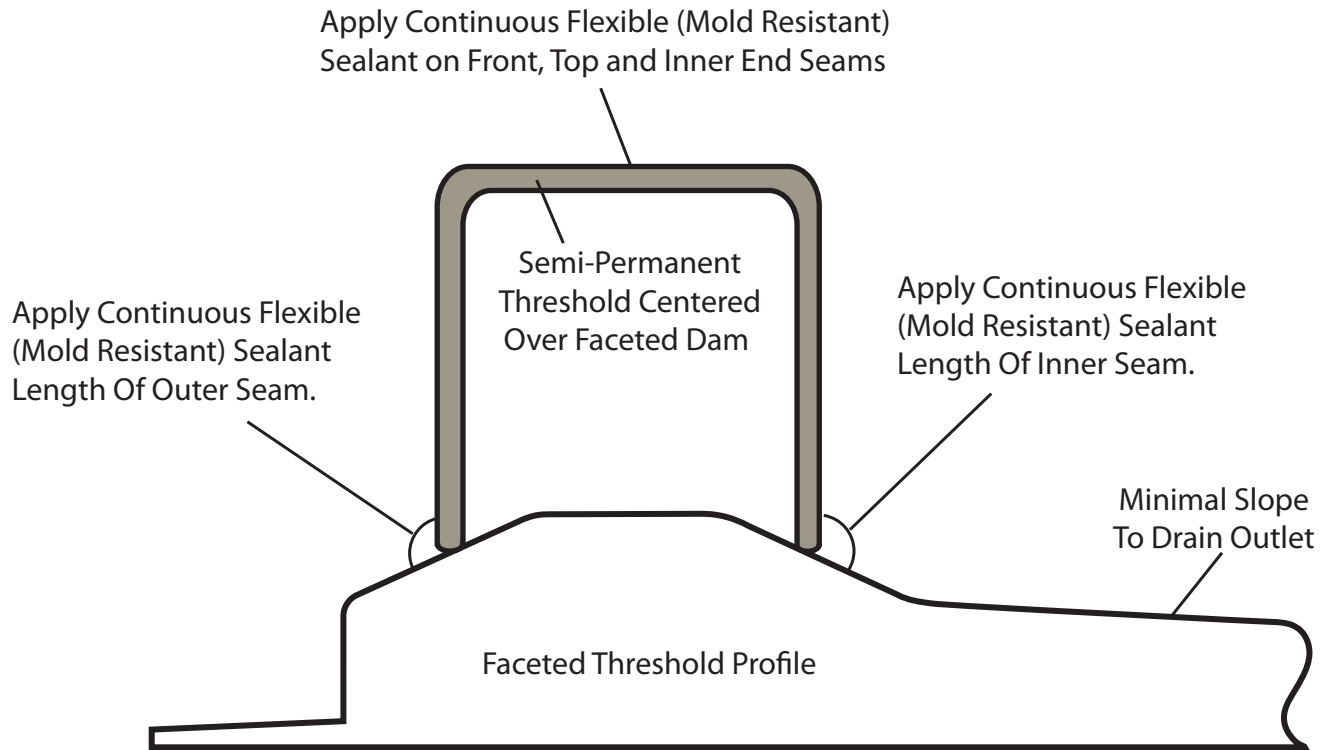

Note: Semi-permanent threshold offered, as an option, on 1.25" faceted threshold models, and is designed for independent field application and removal by others.

**Application Instructions:**

1. Make sure semi-permanent threshold, and application area, are clean and dry before installation.
2. Center the semi-rigid threshold over faceted threshold across the front of the shower. (Tape the top of the threshold to the side wall of the shower at each end to temporarily maintain it in position)
3. Apply a continous bead of flexible, mold resistant sealant along the horizontal seam inside the shower to create a water resistant seal across the inside.
4. Repeat step 3 across the outside (room side) horizontal seam.
5. After the sealant has adequately cured, remove the tape used to temporarily hold the threshold, and apply a continuous bead to seal the seams at each end of the threshold.

 Oasis Lifestyle, LLC 1400 Pidco Drive Plymouth, Indiana 47563	<b>Dwg. Title: Semi-Permanent Threshold</b>	Dwg. No: OTI-12.00	Dwg. Version: v 01.00
	Description: 2.00" Wide x 2.00" High Rigid Threshold For Field Application.	Dwg. Date: 11/30/16	Revision Date:
		Dwg By: Chang	Revised By:
		Implemented:	Sheet: 1 of 1