

# Important Installation Requirements

SHFW / SHMT / SHMD Showers  
SB-MT / SB-MD Shower Bases



# Oasis®

# Pre-Install Information

It is the sole responsibility of the installer to determine the requirements necessary for compliance with all installation codes!

**WARNING! SITE PREP AS OUTLINED IN THE PRODUCT INSTRUCTION IS CRITICAL IN ASSURING PROPER FLOOR SLOPE AND WATER DRAINAGE!**

**DO NOT INSTALL PRODUCT WITHOUT FIRST ADDRESSING QUESTIONS WHICH ARISE DURING THE INSPECTION!**

## Basic Module Check

- Check unit drain position for match to bathroom drain location.
- Check unit for surface damage.
- Check unit color for coordination to other bathroom fixtures.
- Check unit for specified optional items and/or packages.
- **Scan QR code on the back of the unit for full detailed installation instructions.**



# Installation QR Code & Product Labels

## ~IMPORTANT~


This floor is designed with slope for water drainage and requires **SPECIFIC** site preparation **AND** unit installation.

**Alcove floor MUST BE LEVEL and FREE OF ALL DEBRIS!**


Failure to follow the above may result in improper drainage and is **NOT** the responsibility of Oasis.



Scan the QR code to access our **Barrier-Free Installation Requirements**.

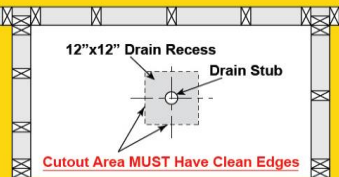


Flange support board

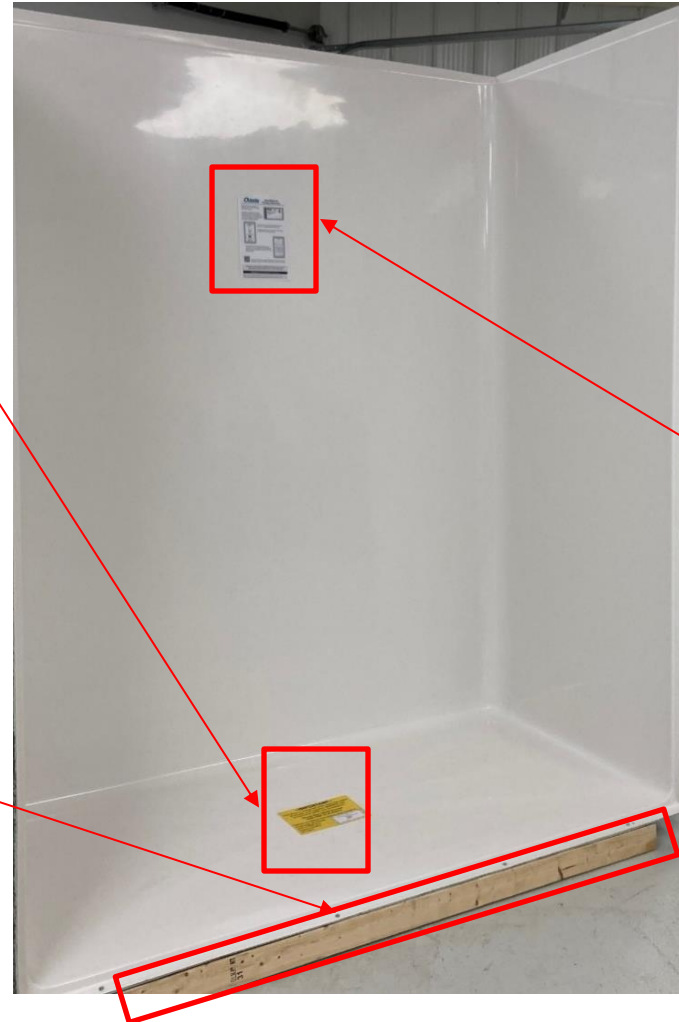


## Oasis Installation & Product Warranty

Accessing Oasis installation & warranty info is easy using your electronic device.

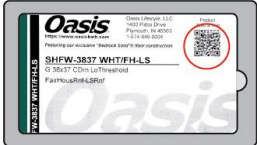


Using your cell phone or tablet camera, scan the code located on the product label on the back of the unit. This will open a direct link to the product being installed.




Scroll down on the product page until you find the "Installation & Warranty" icon.

Clicking on the icon will open the installation for the product being installed.



The Oasis Product Assurance Warranty is included on the last page of the installation. Make sure your customer is aware of this for their records.



The Oasis Product Assurance Warranty can also be accessed directly by scanning this QR code with your phone or tablet.

Installations and warranty are available for download from our website. Search for your specific model number at: [www.oasisbath.com](http://www.oasisbath.com)

**INSTALLER:** Please leave this tag for the homeowner.

NOTE: Oasis does not assume responsibility for improper field installation. The Oasis Product Assurance Program outlines installation conditions & limitations. Refer to the Oasis warranty for specifics. 021325

# INSTALLATION PROCEDURE


## SPECIAL INSTALLATION NOTE:

- The minimal threshold shower stall design does not require a recessed alcove floor.
- **CLEAN UP ALL** debris from area before install begins.
- Note, the drain opening must be a 12 inch x 12 inch cutout.
- Alcove **Front to Back** and **Left to Right** **MUST BE LEVEL** to ensure proper drainage.




# INSTALLATION PROCEDURE

- Before placing the unit in the framed alcove, using a toothed trowel, spread a ¼" layer of mastic or construction adhesive around the drain cutout, extending out to the perimeter of the alcove area.
- Install the drain fitting to the drain opening of the unit. **DO NOT STAND THE SHOWER UNIT ON THE DRAIN FITTING!**
- The front floor flange support block can now be removed to position the unit.

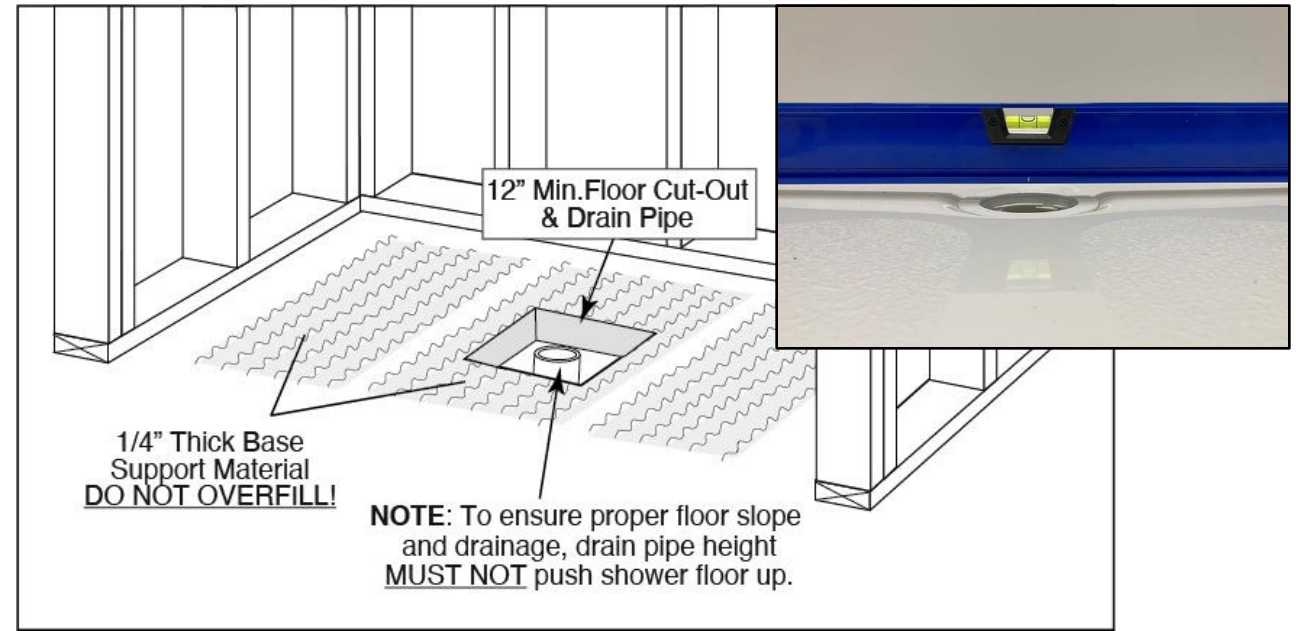


# INSTALLATION PROCEDURE

- The floor drain cutout for a minimal threshold shower must be large enough to allow the shower floor to retain the designed continuous slope to the drain.
- A proper installation will fill only the voids without creating unwanted upward distortion in the designed floor slope required for proper drainage.

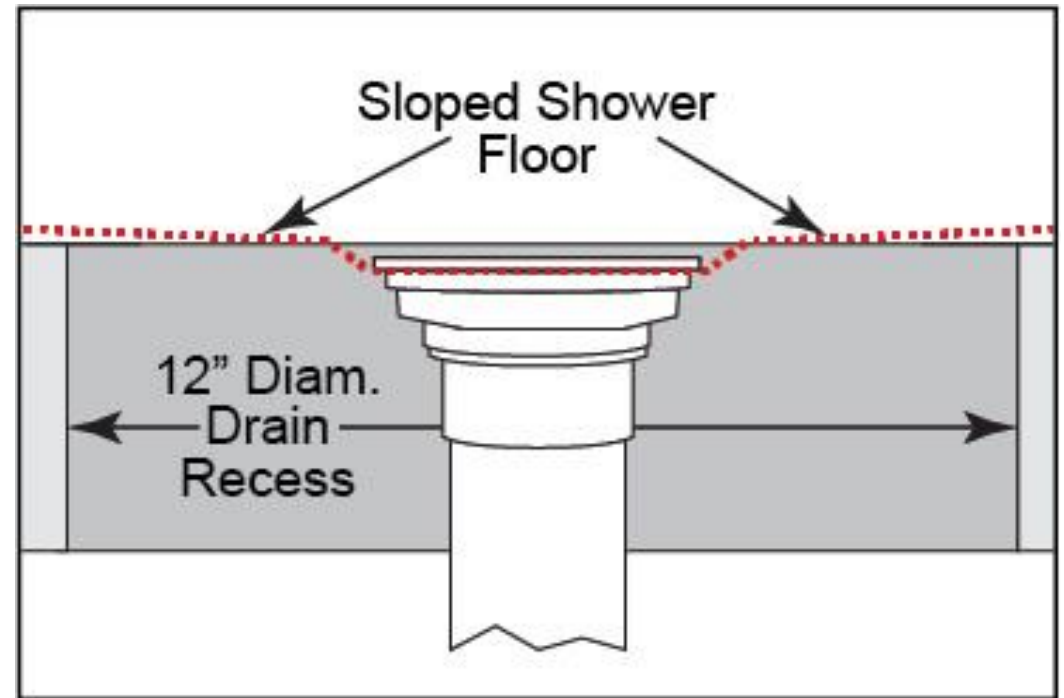

# INSTALLATION PROCEDURE

## Improper Installation Examples WILL NOT DRAIN WATER!

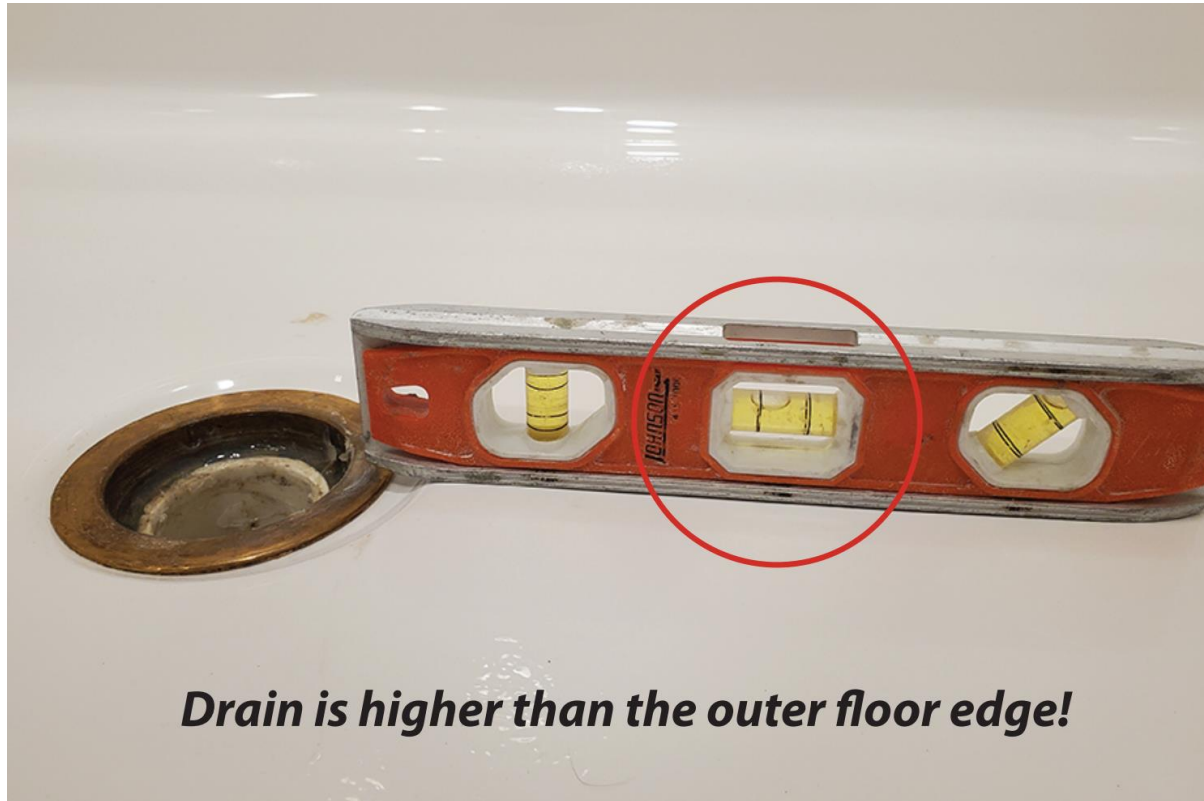

# INSTALLATION PROCEDURE

## Improper Installation Examples

**WILL NOT DRAIN WATER!**






# INSTALLATION PROCEDURE



## Improper Installation Examples

**WILL NOT DRAIN WATER!**

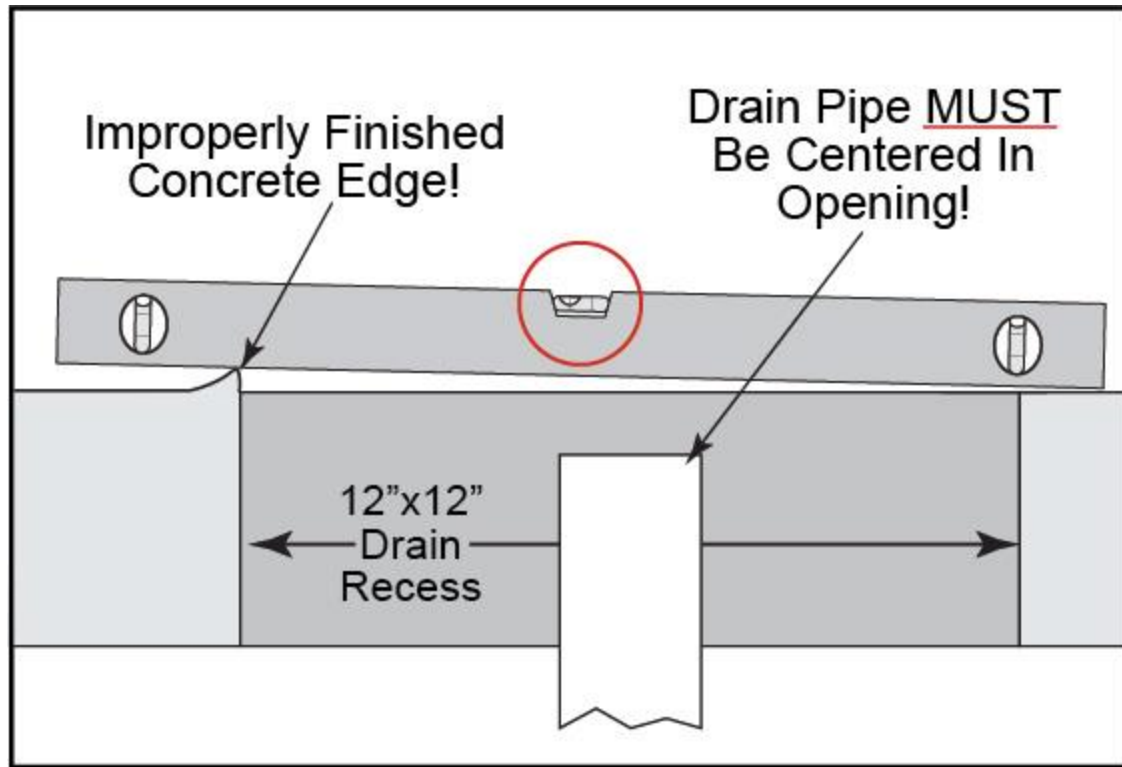

# INSTALLATION PROCEDURE

- Position the unit directly on the support material checking for proper drain fitting and drainpipe alignment.
- Confirm the threshold and floor mounting flange are resting flush on the floor.
- Confirm the unit is level along each side, across the threshold and across the drain.

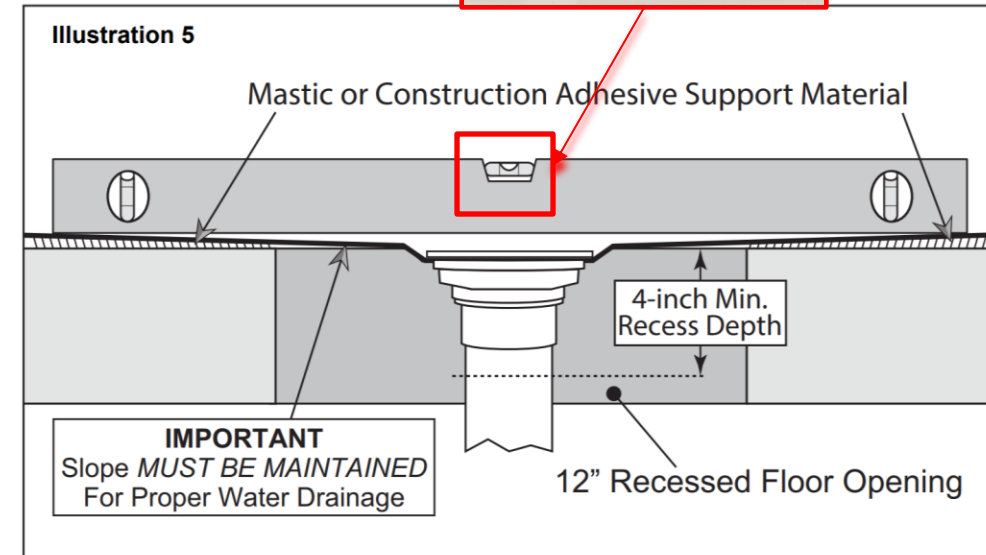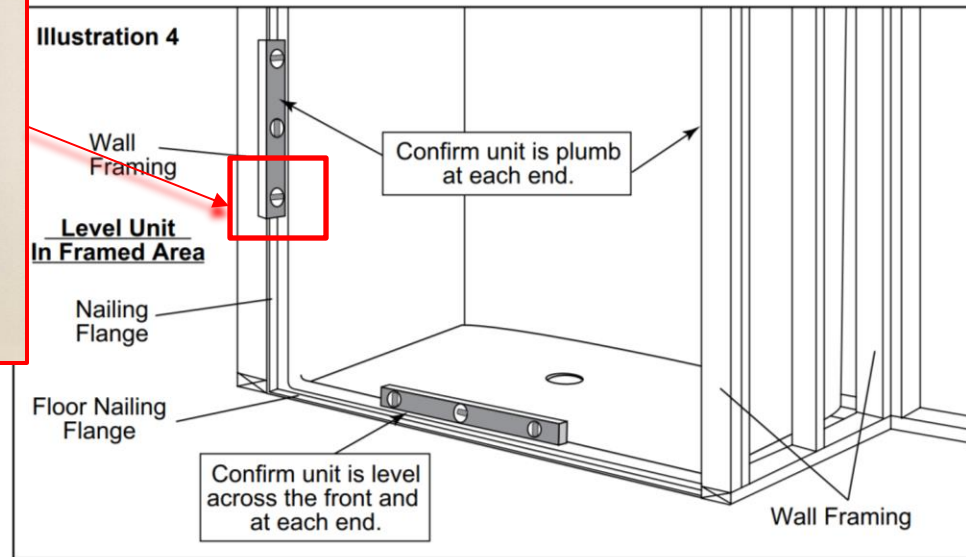

# INSTALLATION PROCEDURE

- The use of a shims behind the nailing flange may be required to ensure the unit remains square.
- Protect the shower floor surface and apply weight on top of the drain until support material cures.
- **FAILURE TO PROPERLY WEIGHT CENTER WILL CAUSE UNIT TO HOLD WATER!**



# FINAL NOTES

## Final install inspection and surface care

- Please refer to the complete model installations for specific framing guidelines as well as other details.
- Check for proper drainage after install.
- Check and Clean unit after install.
  - Construction Adhesive: Soften adhesive with a handheld hair dryer and peel off adhesive. (Caution is advised when using any electrical device near water.)
  - For adhesive residue, apply rubbing alcohol or nail polish remover, full strength. (Rinse surface thoroughly)

**Thank you for choosing Oasis.  
For additional information or questions:**

**CALL: (574) 948-0004**  
**EMAIL: [Info@oasisbath.com](mailto:Info@oasisbath.com)**

